





WWW.SENDO.GR

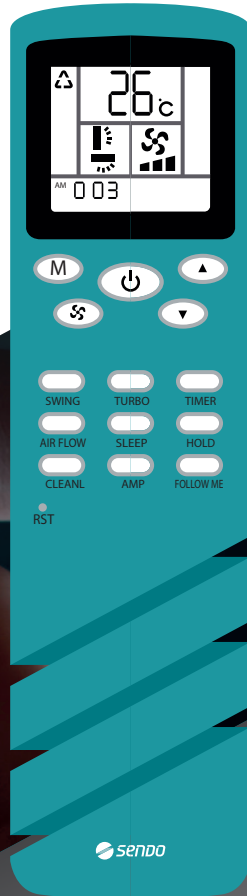

REMOTE CONTROL

► WIRELESS REMOTE CONTROLLER

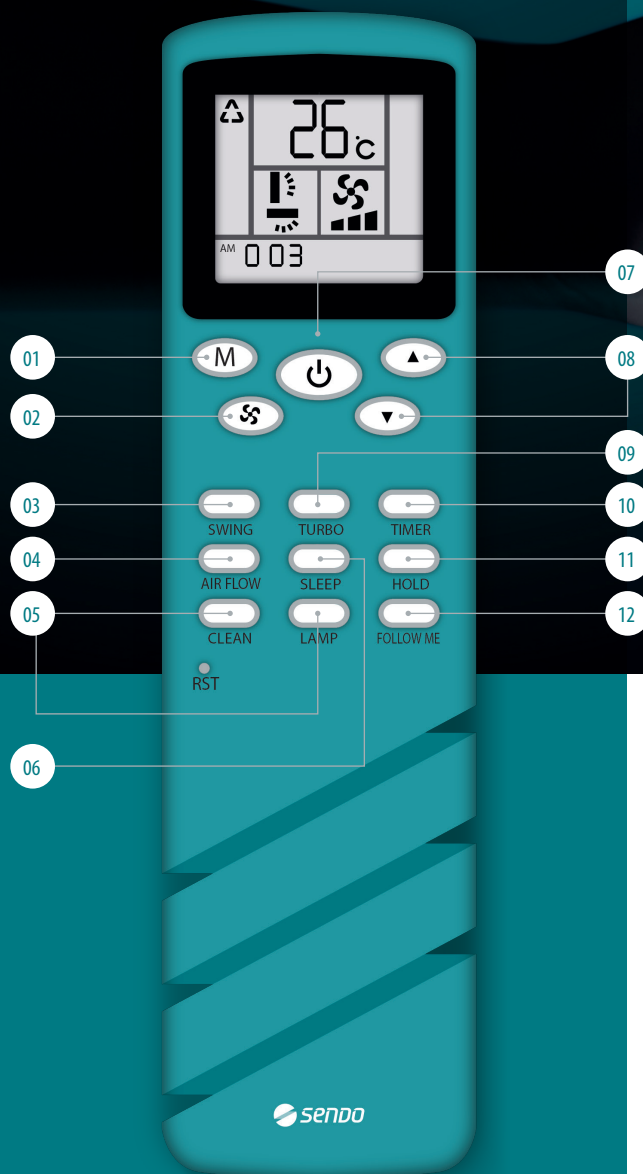

01. OPERATION MODE
*Auto mode selection / cooling /
dehumidification / heating / fan*



07. ON / OFF
*Air conditioner activation /
deactivation*



02. FAN SPEED
Speed selection - low,
medium, high air flow



03. SWING
Setting for vertical
air flow



04. AIR FLOW (OPTIONAL)
Setting for horizontal
air flow



05. "LAMP" and "CLEAN"
Unit cleaning, activation /
deactivation LED display screen



06. SLEEP
Sleep
mode



08. TEMPERATURE
Temperature
setting



09. TURBO
Space direct
cooling / heating



10. TIMER
Start / end
timer



11. HOLD
Keyboard
lock / unlock



12. FOLLOW ME
Remote controller
sensor activation



www.sendo.gr

Greece: Andrea Papandreou Ave., 26 500 Patras, t.: +30 2610 640844, info@sendo.gr
Italy: Via Sandro Penna 4, 06132 Perugia, t.: +39 075 5173708, info@sendoitalia.com