




sendo

FEELING COOL

WIRELESS REMOTE CONTROLLER

▶ WIRELESS REMOTE CONTROLLER

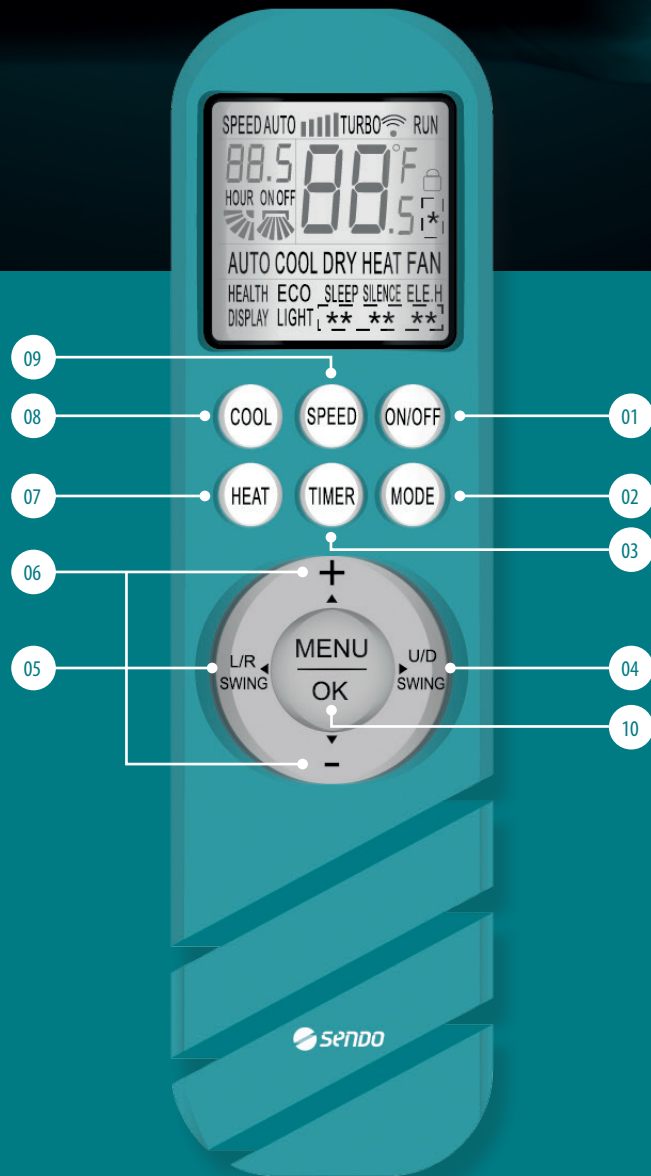



01. ON/OFF
Air conditioner activation
& deactivation.



04. U/D SWING
Moving upstream
and downstream air.



07. HEAT
Heating mode
selection.



02. MODE
Operating mode
selection.



05. L/R SWING
Moving airflow
left and right.



08. COOL
Cooling mode
selection.



03. TIMER
Start / end
timer.



06. + & -
Toggle temperature
range by 1°C.



09. SPEED
Fan volume
adjustment.



10. MENU & OK
Additional
functions menu



TURBO



SLEEP



ECO



iCLEAN



www.sendo.world